INSTALLATION INSTRUCTIONS

READ IMPORTANT SAFETY TIPS BEFORE PROCEEDING WITH INSTALLATION

SAFETY TIPS

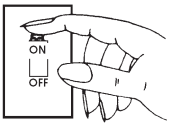

Turn fixture off! (Place wall switch in off position, if fixture has built-in switch or chain pull, switch or pull chain so fixture is off.)

Next - go to the main fuse box. If your fuse box has an ON/OFF switch, simply place main power switch in OFF position.

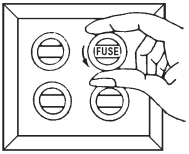

Screw-in type fuses - unscrew the fuse or fuses that control the power to the fixture or room you are working in.

1

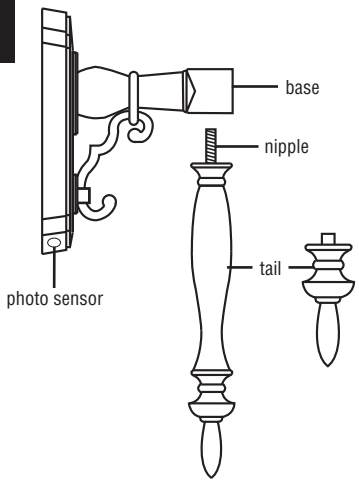

Screw tail into base.

2

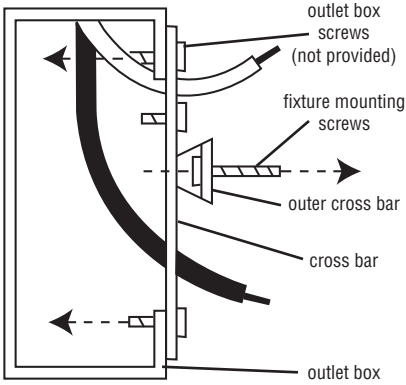

THREAD fixture mounting screws (provided) into outer cross bar. ATTACH cross bar to outlet box with outlet box screws (not provided).

3

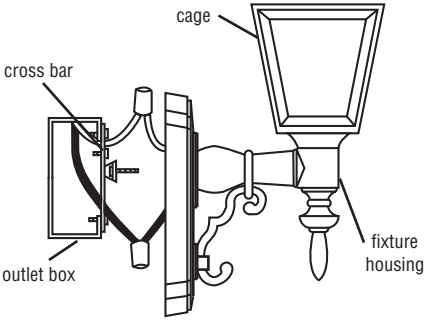

CONNECT THE WIRES. NOTE: Attach black fixture wire to black supply wire, white fixture wire to white supply wire. Use wire connectors (not provided).

4

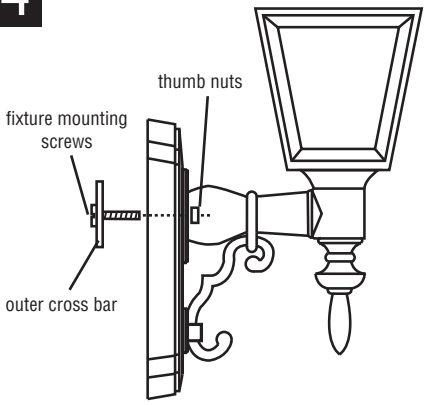

POSITION THE FIXTURE HOUSING over the fixture mounting screws and secure in place with the thumb nuts provided

5

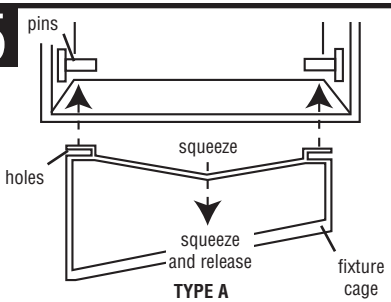

TYPE A

ATTACH FIXTURE ROOF TO CAGE. Squeeze cage as shown. Position holes on side of cage over corresponding pins on underside of roof. Release cage, pins will snap into position.

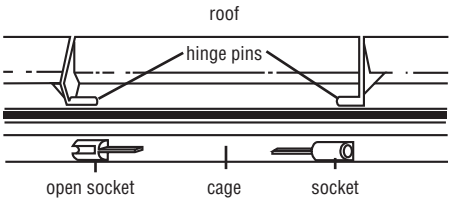

TYPE B

ATTACH FIXTURE ROOF TO CAGE. Slip one hinge pin on roof into hole in socket on cage and snap other hinge pin into open socket.

6

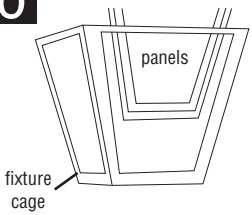

BEFORE SNAPPING HOUSING SHUT, install plastic panels, textured or beveled side out, by sliding panels down cage in slots on inside of cage. Make sure panels are all the way down into seats in cage. Some panels may fit tighter than others and a moderate amount of force may be required to install.

7

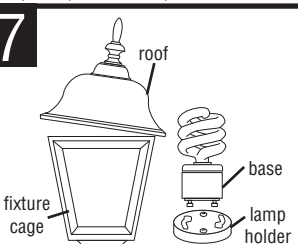

Insert SBCFL into lampholder by firmly grasping the plastic base and pushing into lampholder. Turn clockwise to seat lamp firmly into lampholder with no gaps between lampbase shoulder and lampholder. Then close roof by snapping into place fitting into the tab on cage. Use SBCFL rated max 27W, CCT 2700K and minimum life of 10,000 hours.

8

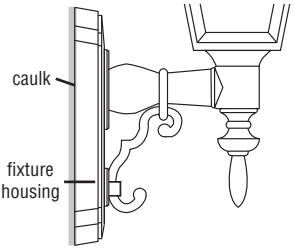

NOTE: Fixture MUST be caulked with an acrylic caulk where fixture housing meets mounting surface. This provides a water tight seal when fixture is installed.

INTEGRATED LAMP/BALLAST REPLACEMENT INSTRUCTIONS

Product contains an integrated Lamp/Ballast combination. To remove, grasp plastic area on each side of bulb area and rotate counterclockwise. Replace with MAX 27W SBCFL (GU-24) that is marked with the UL and C, US Logo. Use SBCFL marked - Not for use where directly exposed to water. Do not use SBCFL marked - Not for use in totally enclosed luminaire. Use max 27W SBCFL with CCT 2700K and minimum life of 10,000hours.

This fixture has an integral photo sensor that turns the fixture off during the day and on at night. The photo sensor is not adjustable. The fixture could possibly cycle on and off due to light reflected from near by surfaces into the photo sensor. If cycling occurs, remove the photo sensor nut and install the swivel hood and base.



The hood and base is adjustable. Hood can be rotated and base can be cut along dotted line to reduce overall length. Check operation before cutting the base.

Clean only with mild soap and water. Avoid spraying with cleaners, insecticides, and pesticides that are petroleum based hydrocarbon products. These will degrade luminaire.